



JANSCHITZ

GMBH

ELECTRIC MILK SEPARATOR

ER 100 EA

Manual

Version 4 / Januar 2022

Janschitz GmbH

Eisenstrasse 81

A – 9330 Althofen

Austria

Tel.: +43 (0) 42 62 22 51 – 0

Fax.: +43 (0) 42 62 22 51 - 13

Internet: www.janschitz-gmbh.at

e-mail: office@janschitz-gmbh.at

GB DE FR

TABLE OF CONTENTS

| | |
|--------------------------------|----|
| General safety recommendations | 2 |
| Technical Specifications | 3 |
| Unpacking and Set Up | 3 |
| Accessories | 3 |
| Assembling Procedure | 4 |
| List of composing parts | 5 |
| Top Bowl assembling Procedure | 6 |
| Skimming Procedure | 7 |
| Skimming Regulation | 8 |
| Maintenance and Cleaning | 9 |
| Top Bowl cleaning Procedure | 10 |
| Spare parts ordering Procedure | 11 |
| Warranty | 11 |

GENERAL SAFETY RECOMMENDATIONS

- Before any installation read this manual very carefully.
- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Do not use the appliance if the rotating parts are damaged.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazard involved.
- Children shall not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service or similar qualified persons in order to avoid a hazard.
- Make sure that you closed top bowl fixing nut tightly enough.
- Take care that water or humidity will not come into the device, specially by cleaning procedures.
- In case of serious malfunction unplug the device from mains and call the authorized service.
- In case that device is not functioning properly even when you have exactly followed instructions described in this manual, you are allowed to use only those procedures which are allowed by manual. Use of any other procedures or adjustments could result in device destruction or longer service time. Injuries connected with such procedures can not be matter of any product liability claims.

We are glad that you decide to buy our cream separator and we promise you that it will serve you for a long time if you will use and clean it according to descriptions stated in this User`s manual.

TECHNICAL SPECIFICATIONS

| | | 100 I |
|-----------------------------------|--------|----------|
| Operating Voltage (model 230V) | V / Hz | 230 / 50 |
| Operating Voltage (model 115V) | V / Hz | 115 / 60 |
| Motor Power | W | 60 |
| Max. Rotating speed | RPM | 9500 |
| Max. Capacity | l / h | 100 |
| Max. Container capacity | l | 12 |
| Recommended capacity for skimming | l | to 100 |
| Relief disc | pcs | 11 |
| Plain disc | pcs | 10 |
| Net weight | kg | 4,70 |

Recommended skimming capacity is volume of the milk that can be skimmed within one skimming cycle. It depends how much solid parts are in the milk. If the flow of the skimmed milk is reduced than the discs and the bowl must be cleaned.

UNPACKING AND SET UP

Take the device out of the cardboard box and remove packing inserts. Place it on the plain and stable surface in clear and dry place. Fixing the device on the surface is recommended. If you want to fix it on the surface, take the screws and fix it on the surface.

ACCESSORIES

In each package you will find also following accessories:

- Operating Manual
- Key for bowl fixing nut and cream screw

100591



Please note!

Be careful not to use cream separator with damaged mains cord!

Be careful that the socket is not damaged!

ASSEMBLING PROCEDURE


1. Put the housing on a desk or other plain and stable surface.
2. Put assembled top bowl on the conical motor beam and softly press it.
3. Put skimmed milk funnel on the top of the housing and then also cream funnel on the top of previous one.
4. Turn top bowl with hand and check if is not touching one the funnels and adjust funnels to desired position for skimming.
5. Place the holder for milk container on the top of both funnels. Place floating device in it. Then place milk container on the top. Fix all together with holder on housing (look picture below).
6. Place closing cork in the hole situated in the middle of milk container. The narrow side of the closing cork handle must be turned away from the cut in the container (see picture). The milk outflow will be closed.

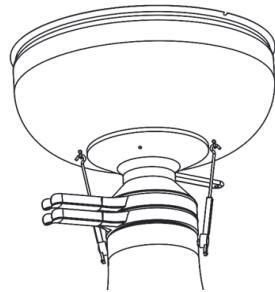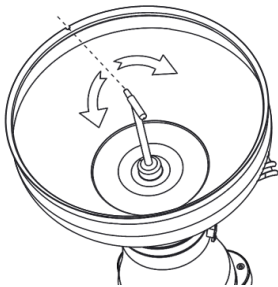***Please note!***

The closing cork must be closed, when you fill the container. This means that the thick side of the closing cork handle must be turned to opposite direction of the cut in the container.

TOP BOWL ASSEMBLING PROCEDURE

- Put the rubber washer in to the notch of top bowl bottom part.
- Place the metal discs. You have to take care by discs placement - device uses two different types of discs - plain discs and relief discs. First you have to insert relief disc, then plain disc and repeat the procedure until all discs are placed. By disc placement avoid any use of force. With gently shaking and turning of the top bowl bottom part all the discs will find their place very easily.
- Put plastic partition in the top bowl cover part.
- When assembling place both assembled parts of top bowl together. Take care that top bowl cover part mark "0" and top bowl bottom part "0" are in the same direction.
- Screw the top bowl fixing nut with hand and fix it strongly with the fixing key. The mark "0" must stay in the same direction. The fixing nut must be strongly fixed, because it is exposed to high forces.

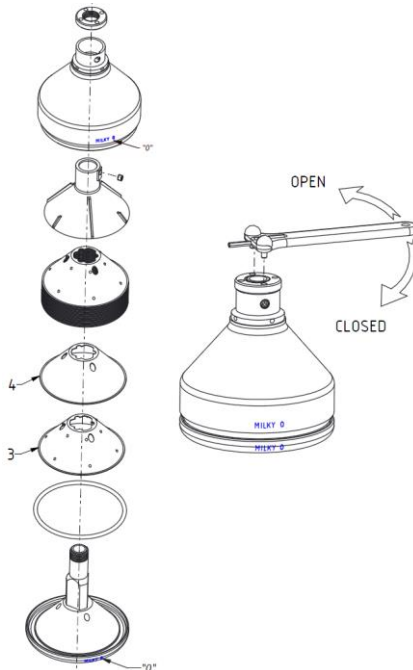

3 - Relief disc

4 - Plain disc

SKIMMING PROCEDURE

Best skimming results are achieved if you start to skim immediately after milking. If milk is cooled, you have to warm it up to temperature between 30 to 35 °C. You can not skim milk with temperature lower than 30 °C. When the milk is properly warmed up, pour it in the container.

- Switch on cream separator with switcher 0 / I and wait 30 seconds that top bowl reaches working speed.
Cream separator FJ 140 has above the switcher a signal lamp which, by switching on the separator, shines red, and when machine reaches working speed starts to shine green.
- Only then you are allowed to turn closing cork to open position. The end of the closing cork is turned to the cut (tooth) in the container and flow is opened.
- If milk is coming out of the housing hole means, that:
 - You have opened closing cork before the motor had reached working speed,
 - Top bowl nut was not fixed enough,
 - Rubber washer is placed badly or it is destroyed.

When this is the case, close the closing cork, turn the milk separator OFF and correct the problem.

Please note!

After you have finished skimming procedure pour approximately 1/2 l of skimmed milk back into milk container. This will clean the rest of cream in the top bowl. After all procedures taken, simply turn OFF the device and wait until motor stops.

Closing cork must always be closed before you turn off the device !

Before each skimming procedure, the bowl must be clean and dry

Please note!


Always check if rubber washer is damaged or too much extended. In such case you have to replace it with new one.

SKIMMING REGULATION

The cream separator is factory adjusted, so you get around 10 % of cream from whole milk volume at milk temperature 35 °C. If you want different density or volume of cream, you can adjust hexagonal adjusting screw (placed in the plastic partition in top bowl upper part).

- If you want more density cream – smaller volume, you have to turn it towards right (clockwise)
- If you want less density cream – higher volume, you have to turn it towards left (counter clockwise). In most cases it is enough to turn adjusting screw for $\frac{1}{4}$ of the rotation.

Cream adjusting screw details and function

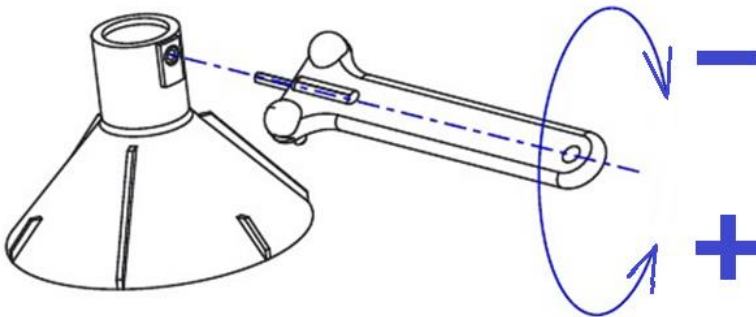

- Smaller cream volume and higher cream density

+ Higher cream volume and smaller cream density

Please note!

You have to take care that not fix the adjusting screw too deep, because you can harm the screw coil! You have to take care not to unscrew the regulation screw too much. If you have done so, you will have problems by disassembling the plastic partition and the top bowl upper part.

MAINTENANCE AND CLEANING

1. All parts of the top bowl should be cleaned with hot water in which you should add some detergent.
2. Rests of milk, cream or other impairs should be cleaned with soft duster or cleaning brush. Specially take care, that you clean very precisely all the holes in top bowl upper part, top bowl bottom part and in adjusting screw. For cleaning this parts cleaning brush is strongly recommended! Other parts of the separator that come in touch with milk, should also be cleaned with hot water in which some detergent is added. Then rinse parts in clean water.
3. If milk or cream rests get dry do not remove them with sharp objects or sharp duster. It can easily happen that you ruin galvanic protection cover or plastic parts.
4. Before cleaning cream separator housing you must before such procedure always disconnect device from mains. Clean it first with wet duster and then try it with dry duster. Take care that water doesn't come into the device.

Ensure that no water comes into contact with the motor and other electric part.


Please note!

Device is protected against direct water access, but you should always take care to avoid that water comes into the device!

Before cleaning device must always be disconnected from main supply!


TOP BOWL CLEANING PROCEDURE

With the key, which is packed with the cream separator, unscrew top bowl fixing nut as it is shown on the picture.

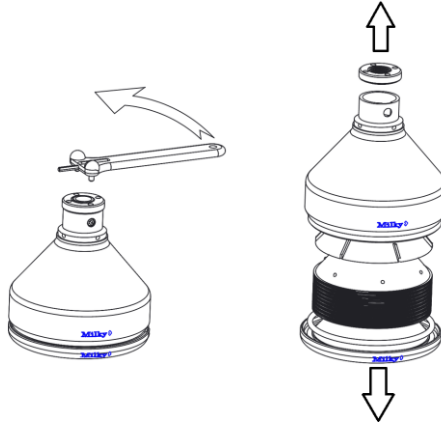

The easiest way to perform this procedure is:

1. Fix key into the holes, which are on the top bowl fixing nut
2. With stronger press on the other key end turn fixing nut until you release it. After that you can unscrew the nut easily with hand.
3. Dismount the top bowl cover with help of fixing nut key and separate all different pieces you will find under the cover - plastic partition, metal discs and rubber washer and clear them with hot water. To achieve better results, cleaning detergent can be added to the hot water.

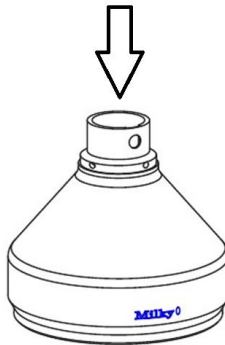

4. Wash all the parts with hot water and dry them with dry and soft duster.

Please note!

***If you can not mount top bowl off the motor after skimming, shake it gently.
Please avoid to use force – you can harm the device most precise parts.***

LIST OF COMPOSING PARTS

| | Part name | ER 100 EA |
|-----------|--------------------------------|------------------|
| 1 | Bottom cover with feet | 3171017 |
| 2 | Motor 230 V | 26000-MS |
| 3 | Motor 115 V | 26001-MS |
| 4 | Main switch | 371151 |
| 5 | Housing - blue | 3712005-B |
| 6 | Mains cord assembly 230 V | 26002 |
| 7 | Mains cord assembly 115 V | 26003 |
| 8 | Bearing cover | 3711013 |
| 9 | Top bowl assembly | 900002K |
| 10 | Outlets for milk and cream Alu | 370002-pol |
| 11 | Container holder Alu | 370001-pol |
| 12 | Floater plastic | 3752045 |
| 13 | Container with washer Alu | 370000 |
| 14 | Closing cork | 3711061 |

TOP BOWL PARTS

| | Part name | ER 100 EA |
|----------|------------------------|------------------|
| 1 | Top bowl balanced | 100579 |
| 2 | Rubber washer | 100581 |
| 3 | Metal disc relief | 100576 |
| 4 | Metal disc plain | 100577 |
| 5 | Plastic partition | 100579 |
| 6 | Cream regulation screw | 100580 |
| 7 | Fixing key | 100591 |

Look drawings on back of the user manual!

SPARE PARTS ORDERING PROCEDURE

Fast and reliable shipment of spare parts is possible only if their description is clear enough. At the time of ordering please state clearly:

1. Type of cream separator.
2. Serial number printed on label plate at the rare side of device.
3. Part name and code number of wished spare part.

WARRANTY

1. In case of troubles consult with your salesman or call authorized service organized established distributor.
2. Equipment is warranted 12ft h free from defects in material and workmanship for a period of 12 months against faulty components and assembly. Our obligation under this warranty is limited 12ft he repair or replacement 12ft he instrument or part thereof, which shall within 12 months after date of shipment prove 12ft h defective after our examination.
3. Defects or injuries 12ft he device, which are result or improper assembly, use, connect or maintenance are not covered by this warranty.
4. The warranty also doesn't cover:
 - Motor, destroyed by water or milk inflow,
 - Mains cord.
5. The given technical specifications are valid only when all conditions in this user`s manuals are fulfilled.
6. Other rights, that are not mentioned in upper obligations 12ft he manufacturer, especially responsibility for personal injury, are excluded.

Dear Customer!

We are sure, that you will find out our cream separator as a helpful tool and we believe that it will serve you for a long time without any problems! We hope it will be recommended also your friends!